



Claudia's Perfect Placement on a Janome

Power off / insert USB drive / turn on the machine / Select Editing Mode:

Select Hoop Size

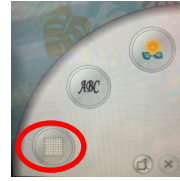


Open the design:
Select design from the **USB #1 or #2**
Select **OK**



Open File

Touch the **Stitch Forward Key (+ sign)** **one time** to advance to the **1st Stitch of the design**.

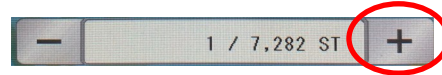

or



The needle moves pass the "built in center stitch" & advances to the **1st Stitch** of the design.


By hand lower needle and mark the needle location on the grid with an "arrow shaped post it note" flag




Hoop the Fabric:

Remove hoop from machine and hoop fabric using 1st stitch placement per Claudia's written instructions. Return hooped fabric to the machine (**no grid attached**).

Use the **Layout Key (4 arrows)** to position the needle to the green start arrow per instructions. Use the **Cross Key (cross in center of icon)** to center the design with in the hoop if needed to center the design in the hoop prior to using the 4 arrows. Select **OK** if the design is now positioned correctly.

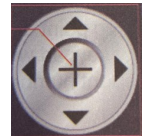

Sew Color #1: Sew the **Placement Line** without thread. Touch **Color Section Key & Center Cross** Watch the stitch indicator move as it "**walks the line**".

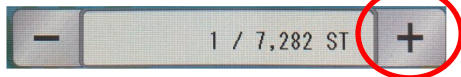

To do this:

Press the **+** sign to advance forward through the design. Stop and lower the needle to check the needle position about every 1" or so to make sure you are accurately following the stitched in **Placement Line**. It is more important to accurately "nail" any angles & points on the Placement Line than to start and end exactly in the correct spot.

If you need to rotate the design to position it correctly do the following:


Press **Rotate Key** 1° at a time in **Edit Mode**



or Position Angle Adjustment Key -5° to .5° in **Embroidery Sewing Mode**



Start with smallest rotations at a time/ Clockwise or Counter Clockwise and check to see if it is enough. Toggle back & forth between the **Layout Key arrows & Rotate** to position the design.

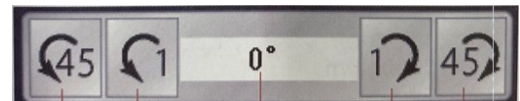

Repeat **Color #1** above (walking the line) until positioned correctly. **Move to Color #2 and load thread & start embroidering.**